DENVER®

www.denver-electronics.com

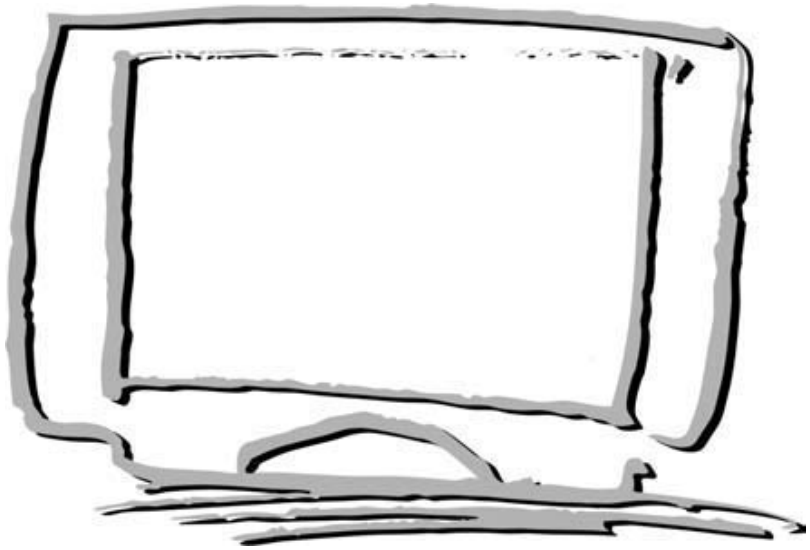

DTX-2128 A2/NIC

User Manual

TABLE OF CONTENTS

S/N	TOPIC	
	General Safety Precautions	3
	Position	4
	Cleaning	4
	Standby	4
	Switching on	4
	Quick Start Guide	4
	User Operation Description	5
	Remote Control Key Function Description	5
	MENU Function Description	8
	Sound Menu Function Description	8
	Equalizer Submenu	9
	Picture Menu Function Description	10
	Overview Menu Function Description	10
	Features Menu Function Description	12
	Child lock Submenu	13
	Timers Submenu	14
	Installation Menu Function Description	14
	Hotel mode Menu Function Description	17
	Automatic scan Function Description	17
	Television Package	18
	Technical Specification	18

Thank you for purchase of this colour TV set. Please read this instruction carefully. You will learn how to use TV set and what to do to prolong its service life.

General safety precautions

1. Do not place anything on the television and ensure a minimum distance 10cm around the apparatus for sufficient ventilation.
2. If your television mains lead or plug becomes damaged or requires replacement, switch off your television, remove the plug from the socket and call a qualified service engineer.
3. Always situate your television on a solid and steady surface.
4. Never use a make-shift stand fixed with wood screws.
5. This television is meant to be used in the home in moderate climates (not in tropical climates). Other use might be dangerous.
6. Do not expose the apparatus to dripping or splashing.
7. Never let anyone, especially children, push small objects into ventilation slots.
8. Route the mains lead where it will not be walked on, crushed, chafed, cut or damaged in any way.
9. Pull the mains plug out of the wall socket and disconnect the aerial during thunderstorms.
10. Do not use the television near water, for example near a bath, sink, and pool or in any damp environment. Do not place objects filled with liquids, such as flower vases, on top of the television.

Remark: Do not leave the device in stand by mode for a long time.

11. If you have spilt liquid into your television, or it fails to operate correctly, switch it off, disconnect the plug and call a qualified service engineer. Never remove the back cover.
12. Ensure that the ventilation is not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains etc.
13. Do not place naked flame sources, such as lighted candles on the apparatus.
14. Take attention to the environmental aspects of battery disposal.

Attention: Do not throw Batteries in to litter bin. Please, give it to appropriate station or shop-assistant.

Notice: Do not keep Batterie under the sun or in the heat. Do not throw it in the fire. It might Burst!

Notice: Never take off televisor shell to avoid electric shok! There are no useful parts for consumer! If it need's repair, let it do the skilled personnel of service of televisors. Do not cover air vent with any objects.

Your television is in conformity with the safety requirements of standard EN 60065.

Child's an invalid safety.
Keep all packing component parts (plastic bag, box, foam shell and etc.) out of reach of children.

Notice: Do not let child to play with the bag. May Choke!

To protect children and ill people from electric shok, you have to take care of them.
This device is not a toy. Do not let a child to play with it.

Symbols of this instruction.

Important notes are specially marked for your safety. It is necessarily to pay attention to those notes, to avoid accidents and damage.

Notice: Warning of danger for your health and risk to get injured.

Attention: Specify possible danger to televisor or other objects.

Remark: Gives You further advice and information.

Position
For best results, choose a position where light does not fall directly on the screen and away from sources of heat. Do not put objects with magnetic field nearby the television or it could affect the quality of the colours.

Cleaning
Switch off and unplug the television and use only a lightly dampened soft cloth to clean it. Do not use chemically active substances as these may damage the cabinet finish.

Standby
For convenience your television can be switched to standby with the remote control. To preserve optimum picture quality (by de-magnetising the picture tube), we advise you to switch off your television at the on/off switch regularly.

Switching on
1. Remove the battery cover from the remote control unit and install two AA type batteries according to the diagram inside the battery compartment. Replace the battery cover.

⚠ **Notice: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.**

2. **Connect your aerial to the TV set.**
3. **Connect your TV to a 230 VAC power socket.**
4. **Switch on your TV with the power switch on the front panel.**
   If the screen does not light up, press a button P+ or P- on the front of the television set or any key such as POWER, ▲ or ▼, 0, 1, …9 on remote control.

Notes:

1. After switching the television set on by using power button on front panel, the set switchs to the same mode as it was before switching off by this button. If TV set was switched off by using the POWER key on remote control, it switches to standby and the indicator LED on the front panel turns red.

2. After switching television set from standby to operating status, the indicator LED turns to green from red.

Quick Start Guide

1. Fit the Batteries into the Remote Control according to the diagram in the battery compartment.
2. Plug your main home aerial into the TV set.
3. Plug your TV into the mains and switch ON by pressing the power button on the front panel. If your TV screen does not light up, press the **POWER,** ▲ , ▼ key or any digital key on the hand unit to cancel standby mode.
4. On your remote control press the **"OK"** key once. The main menu will appear on the screen.
5. On your remote control use the key 18 (P+, P-) to select Installation icon.
6. On your remote control press the ▶ key once to select Installation menu.
7. On your remote control press the ▲ key four times to select Autostore item.

On your remote control press the key P- ▶ twice to run Autostore. Your TV will now automatically tune and store your local available TV stations. This may take a few minutes.

8. Select your favorite program by using the ▲, ▼ keys or the digital keys.
9. Set your favorite volume level by using ◀ , ▶ keys.

⚠ **Remark: If You forget the child lock code or dial it wrongly, press code 4711 on remote control by pressing digital key to unlock the locked program.**

10. You may change code the lock after TV will switch on. Refer to the instruction booklet for further information about the many other facilities.

⚠ **Remark: When there is no signal in the aerial socket, the TV screen will appear in blue colour if the Blue back item is set to On in Features menu.**

User Operation Description

Remote Control Key Function Description

Operations by the keys on the Remote Controller

1 POWER

This key turns the set from the standby mode into On mode.

2 1-9 digits

Press to select TV programs number directly, program number will be displayed on the screen for 3 seconds.

For programs 01~99, to get the expecting program quickly, it can be accessed by pressing 2 digital keys in sequence. Say if you want to access program 23 , press key 2 first, and within 2 seconds, press key 3. If key 3 is not pressed within 2 seconds, the program accessed is program number 2.

3 TV

Press the button will view the TV picture.

4 I/II

Press to force Mono to Stereo or Stereo to Mono for NICAM / A2 stereo signal, and toggles between Dual I and II if NICAM / A2 Dual Sound is available. More detailed information is listed below.

4.1 FOR NICAM STEREO SOUND SIGNAL.

When NICAM stereo sound signal is received, it will be decoded by TV system automatically, and the yellow OSD " " indicates decoding NICAM stereo signal for current sound status. If press key "**I/II**" once, the sound will be forced to mono mode with yellow OSD " ▽ " displayed. Press key "**I/II**" once more, the sound mode will be back to NICAM stereo with yellow OSD " " displayed.

4.2 FOR NICAM DUAL SOUND SIGNAL

When NICAM dual sound signal is received, it will be decoded by TV system automatically, and the yellow OSD " I "indicates decoding NICAM dual channel 1 sound signal for current sound status. If press key "I/II" once, the sound will be forced to NICAM dual channel 2 mode with yellow OSD " II" displayed Press key **"I/II"** for the third time, the sound will be forced to MONO mode with yellow OSD " ▽ " displayed. Press key "I/II" for the fourth time, the sound mode will be back to NICAM dual channel 1 with yellow OSD " I " displayed.

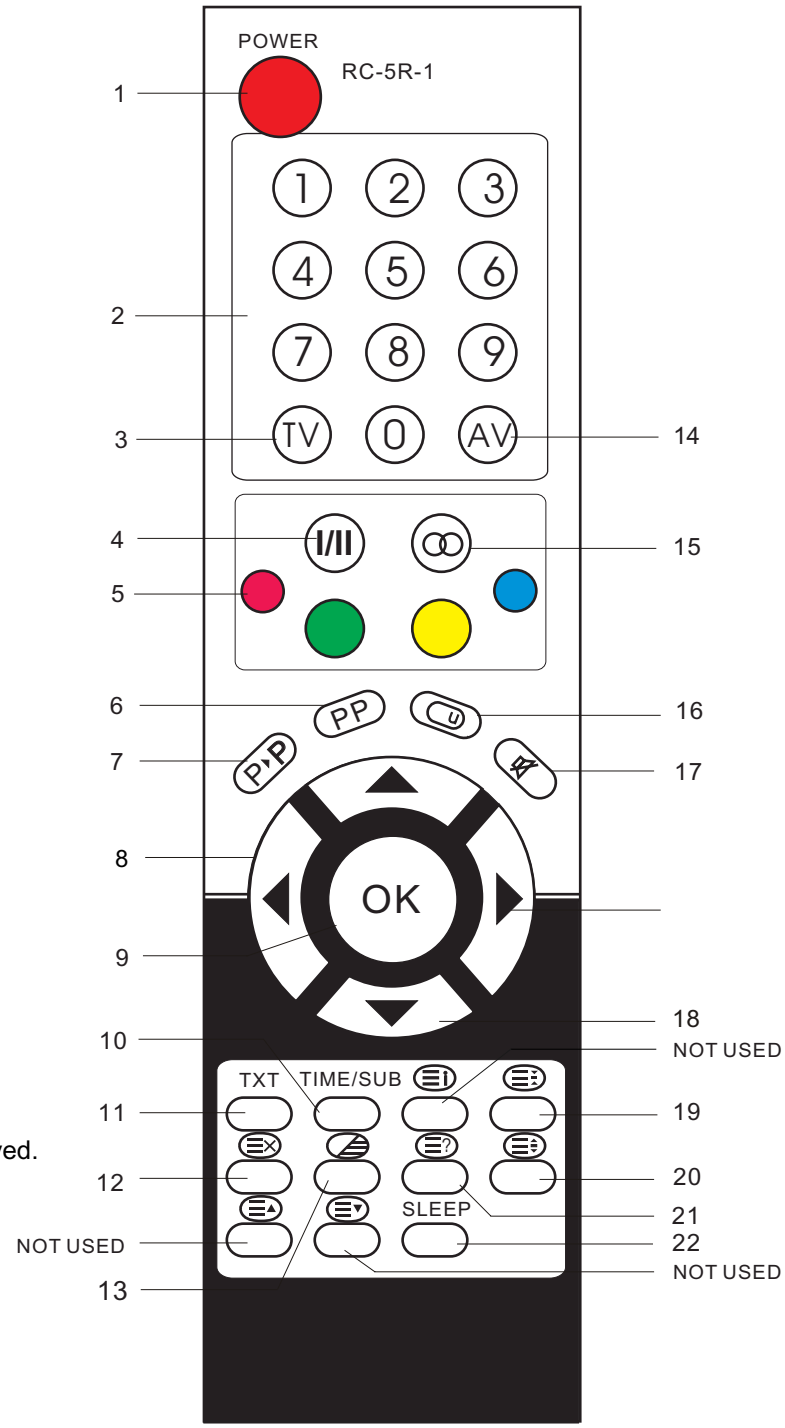

4.3 FOR NICAM MONO SOUND SIGNAL

When NICAM mono sound signal is received, it will be decoded by TV system automatically, and the yellow OSD " ▽ " indicates decoding NICAM mono signal for current sound status. If press key "**I/II**" once, the sound will be forced to mono mode with yellow OSD " ▽ " displayed.

4.4 FOR A2 STEREO SOUND SIGNAL.

When A 2 stereo sound signal is received, it will be decoded by TV system automatically, and the yellow OSD "⧉" indicates decoding A2 stereo signal for current sound status. If press key "**I/II**" once, the sound will be forced to mono mode with yellow OSD " ▽ " displayed. press key "**I/II**" once more, the sound mode will be back to A2 stereo with yellow OSD " ⧉ " displayed.

4.5 FOR A2 DUAL SOUND SIGNAL

When A2 dual sound signal is received, it will be decoded by TV system automatically, and the yellow OSD "I" indicates decoding A2 dual channel 1 sound signal for current sound status. If press key "**I/II**" once, the sound will be forced to A2 dual channel 2 mode with yellow OSD " II " displayed. press key "**I/II**" once more, the sound mode will be back to A2 dual channel 1 with yellow OSD " I " displayed.

4.6 FOR MONO SOUND SIGNAL

When mono sound signal is received, it will be decoded by TV system automatically, and the yellow OSD " ▽ " indicates decoding mono sound signal for current sound status. Even if press key "**I/II**" once, nothing changed.

5 RED, GREEN, YELLOW and BLUE keys

In **TV** mode, press red key to display **Sound** menu directly, press green key to display **Picture** menu directly, press yellow key to display **Overview** menu directly, press blue key to display **Installation** menu directly,

These 4 color keys in teletext mode can quickly enter the pre-captured teletext page according to indicated information at present teletext page.

6 PP

The TV picture can be adapted to suit the current lighting condition. Press successively to select the desired setting. There are 5 picture modes such as "**Personal, Movie, Sport, Weaksignal, Game". Movie, Sport, Weaksignal** and **Game** are preset values of **Brightness, Contrast**, **Colour and Sharpness**, whereas **Personal** is the last analog setting that the user had set.

7 RECALL

Press it for the first time to view the previous program. Press it for the second time to return the present program.

8 V+ ▶ /V- ◀

Press the ▶ or ◀ to set the sound level higher or lower, volume bar will be displayed for 3 seconds.

In teletext mode, Press the ▶ or ◀ to set the sound level higher or lower, volume bar will not be displayed.

9 OK

This menu contains five sub-menus used for selecting various parameters of picture, sound, overview, feature and Installation.

Press the **OK** key to display main menu. Press the **OK** key again, the main menu will disappear.

It is also used to return from a submenu to main menu.

You can call up a sub-menu and values to set using the arrow keys (18 and 8).

10 TIME/SUBCODE

Press the button will display time on screen. Press the button once more, the time will disappear. This key allows the user to enter 4 digits subcodes to show more information when subpage is available in the current page.

11 TV/TXT

Press the **TV/TXT** key to change the viewing condition from TV to Teletext mode if TV stations in your local have teletext broadcasting. Press the **TV/TXT** key once more, TV picture will display again.

12 CANCEL

This is a toggle function key to display last TV picture from the current teletext page or vice versa.

13 MIX

This is a toggle function key to display **TV** picture and teletext together or teletext only.

14 AV

Press the button will view the TV and the external video in the following sequence.

TV → AV1 (Full Scart) →AV2 (AV Scart) → S-Video (optional) → RGB → TV

Related OSD will display for about 3 seconds.

AV modes

The required outer signal source you can select by pressing the **AV** key on the remote control (depending to the model).

AV1, AV2: Selects video and audio inputs on the **SCART1** or **SCART2** connectors. Used for direct connection of VCR, satellite receiver, etc.

S-VIDEO: Selects the inputs of sound, picture's sharpness and colour signals in the **SCART2** socket. It is used to connect the video, satellite receiver or other equipment.

Front AV: Using the **Front AV** connector to connect directly audio- or videotools for example videocamera.

Please take care that the Scart connector "**AV 2**" is parallel connected with the "**Front** "(side) and can not use together in the same time to avoid interferences during the operation.

RGB: Selects red, green and blue signal inputs on the **SCART1** connector. Used for the direct connection of game machines and other equipment to get good quality picture.

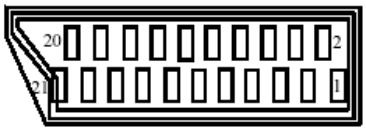

Notes:

1. For better picture quality your VCR or satellite receiver should be connected to SCART socket on your TV set.

2. For receiving VCR signal via areal socket a programe with number 99 is recomanded.

15 SOUND EFFECT

You can find a Incred. Mono or Incred. Stereo effect depending on the input signal (mono or stereo). In "**Incred. Mono"** mode, sound signal is pre-processed to obtain special sound effects just for mono sound signal. In "**Incred. Stereo**" mode, sound signal is pre-processed to obtain special sound effects just for stereo sound signal.

16 STATUS

Press **STATUS** to view present program number and name, color standard, sound standard, preset mode, and etc. Status display OSD will last for 3 seconds.

17 MUTE

Press **MUTE** key to switch off the sound temporarily. The mute sign will be displayed. Press **MUTE** key or ▶ key again to recover the sound from mute mode.

18 P+ ▲ /P- ▼

Press P+ to select programs upward and P- to select programs downwards, program number will be displayed for 3 sec. When Teletext is active, these keys increase or decrease the current teletext page.

▲▼ key can be used as a page up/down key in teletext mode.

19 HOLD

This is a toggle function key which stops the current page acquisition to prevent teletext update. **HOLD** can be released by pressing **HOLD** key or requesting 3 digits page number again.

20 SIZE

This key is to expand character size and display half teletext page. The first **SIZE** key pressing will display expanded upper half of teletext page. The second **SIZE** key pressing will display expanded lower half of teletext page. The third **SIZE** key pressing will display normal size teletext page.

21 REVEAL
This is a toggle function key to display hidden characters.

22 SLEEP/INDEX
The set will switch off to standby mode if the sleep timer expires. The Sleep timer can be set in step of 5 minutes with a maximum time up to180 minutes. To disable the sleep function, repeatedly press the **SLEEP** key until the set time returns to off. Related OSD will display for about 3 seconds.
Press this key will show the teletext index page.

MENU Function Description

Your television set is controlled by using **OK** tables such as **Sound, Picture, Overview, Features** and **Installation**. These **OK** tables appear on the screen after pressing remote control button **OK** one or more times. **OK** button is used to select the different menus. It is also used to return from a submenu to upper menu. The television set parameters and their values are arranged in these **OK** tables. The item line of the **OK** table with required parameter you can select by using remote control keys ▲ or ▼**,** and to change this parameter by using keys ▶ or ◀**.** And ▶ can be used to select submenu. The sub-menu tables from the TV screen disappears after pressing the remote control key **OK** or about after the last action in these tables.

General Menu Operations.
To minimize the number of keys on remote control, the less frequent used functions are only accessible via menus. These menus are controlled by using keys such as **OK**, ▲ , ▼ , ▶ , ◀ and etc.

Sound menu function description

If the **OK** key is pressed once, we can get main menu as showed picture as below. The default selected item is **Sound** menu icon. By pressing ▶ key once to get the first item row "**Volume**" in sound menu. The color of selected item will be changed to green from white.

The **Sound** menu has following items:

a) Volume (63 Steps)
b) Balance (+/-31 Steps)
c) Bass (63 Steps)
d) Treble (63 Steps)
e) AVL (Automatic volume level control function setting. Two modes are available as On and Off)
f) Loudness (On/Off) (To boost low and high frequencies at low volume status.)
g) Listening mode (Surround Effect) Two modes are available as Normal / Incred. Mono (Wide Mono) or / Incred. Stereo Wide Stereo)
h) Equalizer (Five bands equalizer setting for sound effect. Adjustment with +/-7 steps is available for each band.)
i) Preset (Personal / Voice / Music / Theater) (The Voice, Music and Theater modes are preset with fixed value for Bass, Treble, Loudness and Equalizer. Personal is

the last adjustment value of Bass, Treble, Loudness and Equalizer.)
These items can be selected through ▲ / ▼ keys. Item value can be modified by ▶ / ◀ keys. The graphic and numeric display of the control level of selected item is displayed at the right side of the sound menu on screen.
Press **Red** key once, the **Sound** menu appears also immediately. Press **OK** key twice to exit the Sound menu.

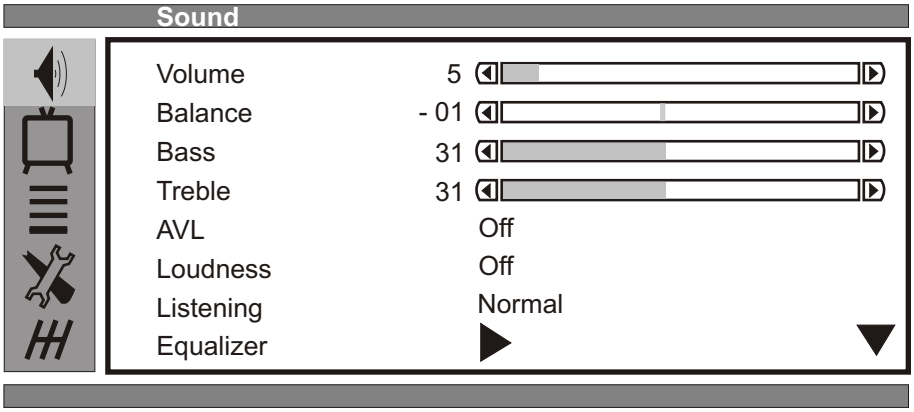

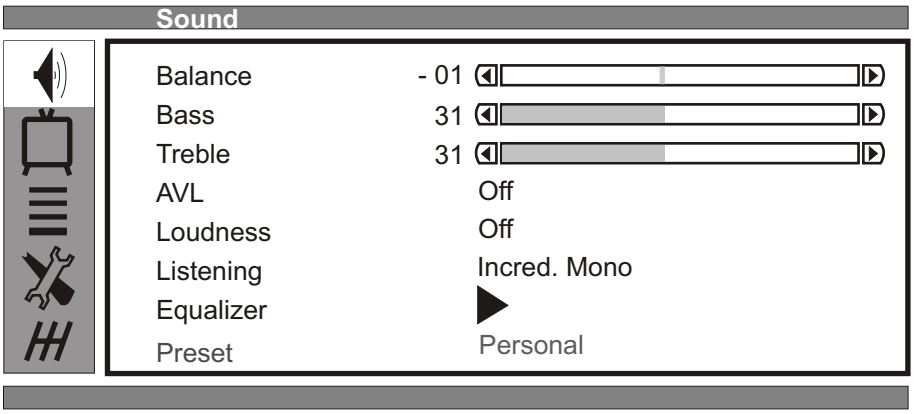

Equalizer submenu

When item "**Equalizer**" is selected, press ▶ key to enter into **Equalizer** submenu as showed below.
There are five audio frequency bands available for adjustment such as 100Hz, 300Hz, 1KHz, 3KHz and 8KHz. ▶/ ◀ keys are used to select different band. ▲ / ▼ keys are used to adjust value of selected item. The color of selected item will become green. Press **OK** key once to return to upper sound menu.

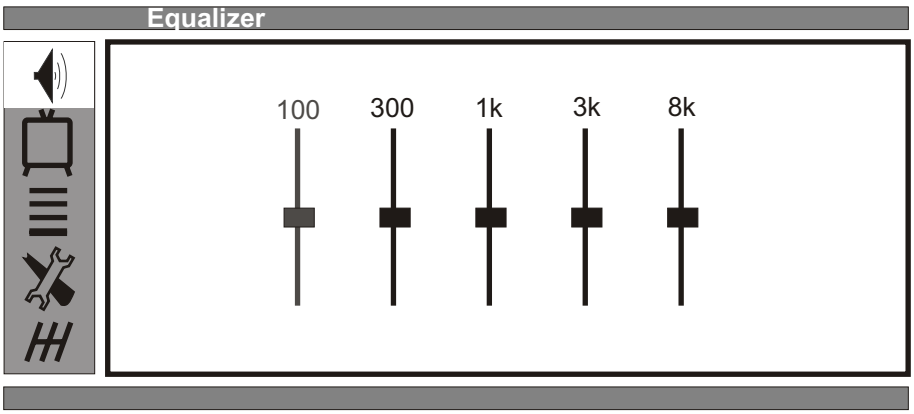

Picture menu function description

While sound menu displays on screen, press **OK** key to exit from sound menu. Then press **P-** key ▶ on remote once for the first line **Brightness** in the picture menu to open.
The color of selected **Brightness** item will become green.
The **Picture** menu has following items:

a) Brightness (63 Steps)
b) Contrast (63 Steps)
c) Colour (63 Steps)
d) Sharpness (63 Steps)
e) Colour Temp (Color temperature setting for picture. Three modes are available as Normal / Warm / Cold)
f) Preset (Personal / Movie / Sport / Weaksignal / Game) (Please refer to above P.P. key function description for remote control.)
g) Zoom (4:3 / 16:9)

These items could be selected through ▲ / ▼ keys. Item value can be set by ▶ / ◀ keys. The graphic and numeric display of the control level of selected item is displayed at the right side of the MENU on screen.

Press **Green** key once, the **Picture** menu appears also immediately. Press **OK** key twice to exit the Sound menu.

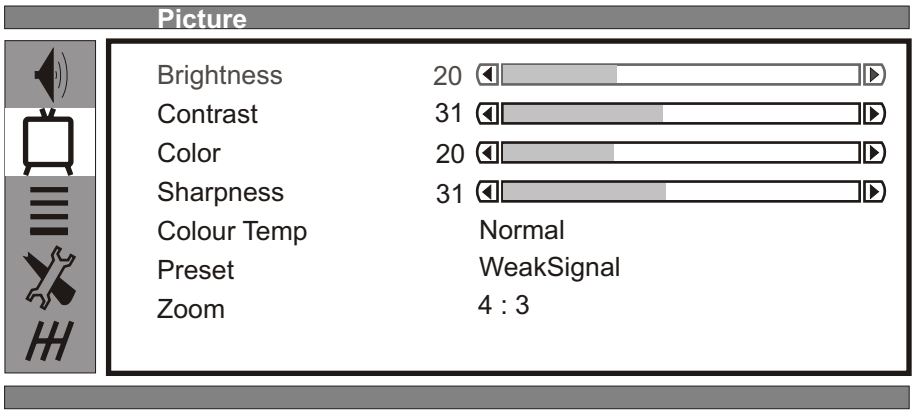

Overview menu function description

While picture menu displays on screen, press **OK** key to exit from picture menu. Then press ▼ key to select **Overview** icon. And press ▶ key to select current program No. in **Overview** menu as showed below. The color of selected current program No. will become green.

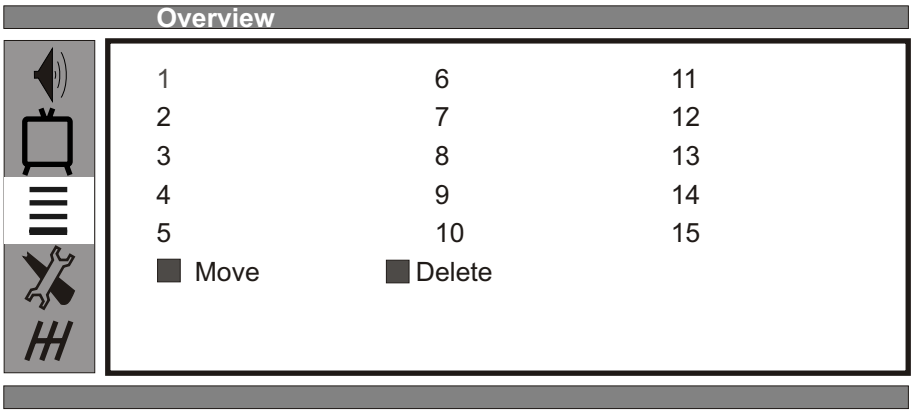

The **Overview** menu has following items:

a) Move

b) Delete

▲/▼keys are used for program selection listed in row. ▶/◀ keys are used for program selection listed in column. And the picture of selected program will display on screen accordingly.

> ⚠ **Remark: The moving of programs will be much easier if you will set a name for each program, see the Installation menu.**

Move function: it's for program movement. The steps are listed below.

a) Firstly, select a program No. to be moved by pressing ▲/▼or ▶/◀keys.
b) Press **Green** key on remote control once. A prompt will appear on screen as picture showed below.
c) Select expecting target program No. by pressing ▲/▼or ▶/◀ keys.
d) Press the **Green** key once again. The movement job will be completed in a few seconds. Then the picture of target program No. will be displayed on screen.

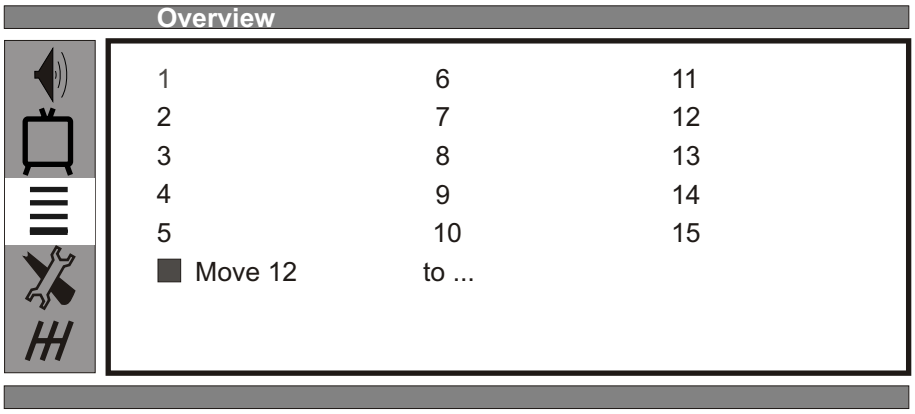

Delete function: to delete program. The steps are listed below.

e) Firstly, select a program No. to be deleted by pressing ▲/▼or ▶/◀keys.
f) Press **red** key on remote control once. A note will appear on screen as picture showed below.
g) Press the **red** key once again. The deleting job will be started and completed in a few seconds. Then the upper program No. will be moved to deleted program No. accordingly, and it's picture will be displayed on screen.

> ⚠ **Remark: The program "0" is not displayed and also can not be moved or deleted.**

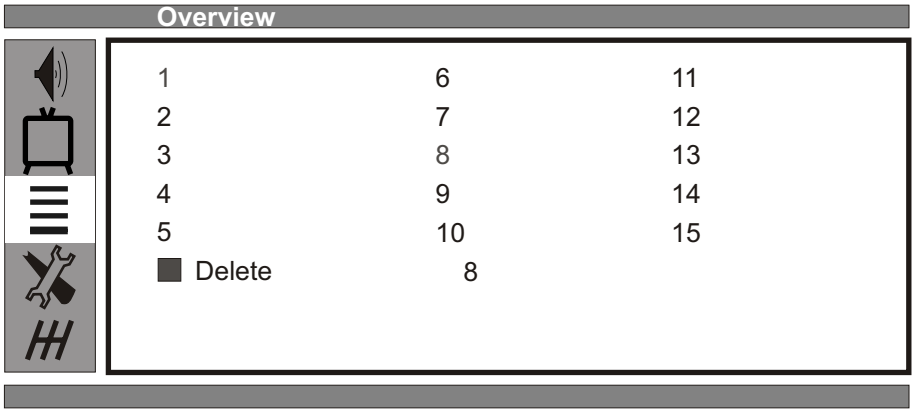

Remark: Deleted programs automatically slide to the last of programs (99), and will be in the Skip feature no longer elected.

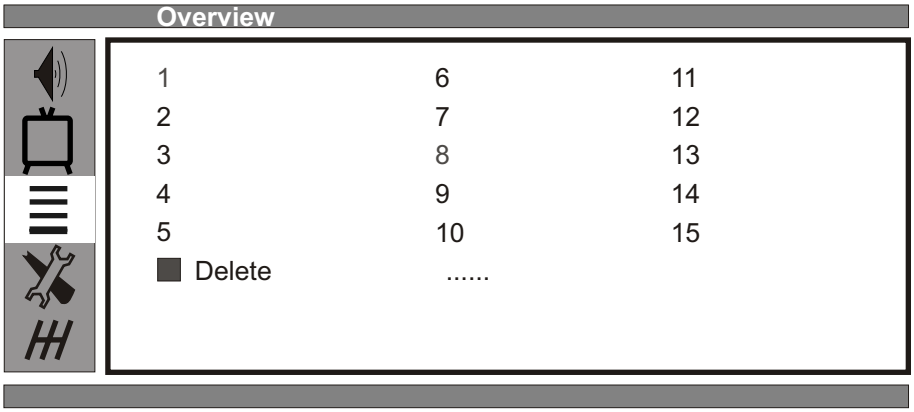

Press **Yellow** key once, the **Overview** menu appears also immediately. Press **OK** key twice to exit the Sound menu.

Features menu function description

While **Overview** menu displays on screen, press **OK** key to exit from **Overview** menu. Then press ▼ key to select **Features** icon. And press ▶ key to select **Blue Back** item in **Features** menu as showed below. The color of selected item will become green.

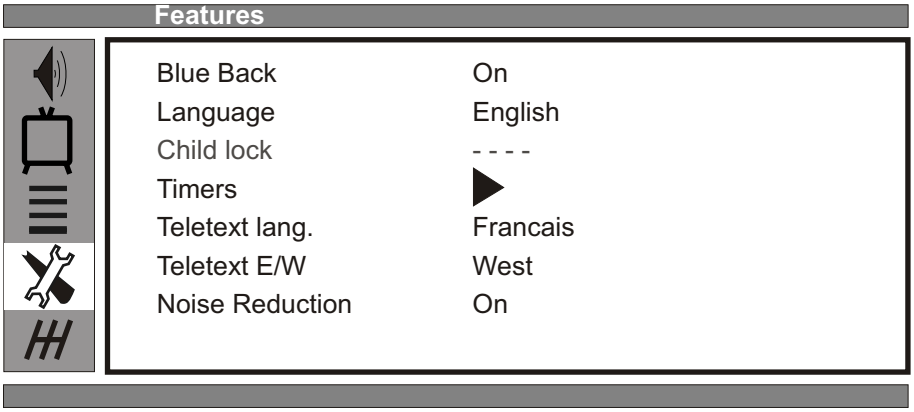

The **Features** menu has following items:

a) Blue Back (On/Off) (To display blue picture on or off on screen when no any TV/AV signal available.)
b) Language (The menu language selection)
c) Child lock
d) Timers (Setting the time)
e) Teletext lang (Teletext language selection)
f) Teletext E/W (East/West)
g) Noise Reduction (On/Off) (a license free competitive noise reduction algorithm from NXP to achieves similar channel separation)
h) Output for AV
Selection: Monitor (Front AV via AV1 output)
TV (Tuner signal via AV1 output)

Child lock submenu

it's used to lock some TV programs to prevent watching for children.

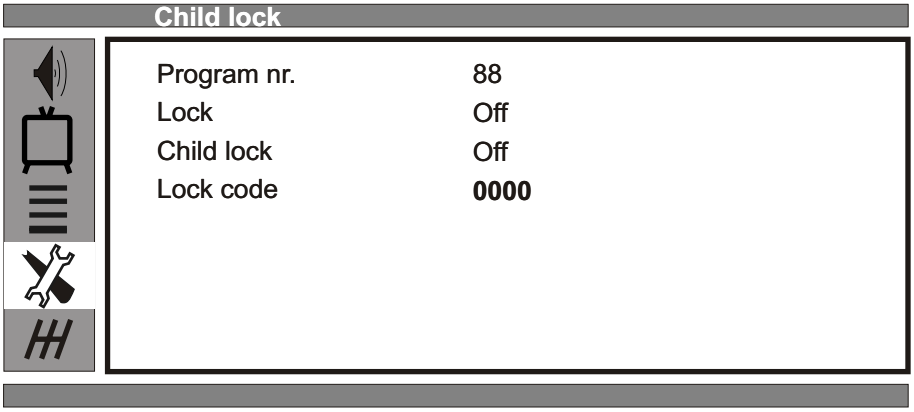

The **Child lock** submenu has following items:

a) Program nr. (1-99)
b) Lock (On/Off)
c) Child lock (On/Off)
d) Lock code (4 digital)

The lock function can be enabled or disabled by **Child lock** item setting in **Child lock** submenu. The lock status of particular program is control by **lock** item in **Child lock** submenu.

Child lock setting steps are listed as below.

a) Select **Child lock** item in **Features** menu.
b) Press ▶ key once. Four pcs of prompt lines will appear.
c) Enter initial passport **0000**. The **Child lock** submenu will appear on screen as showed below.
d) Select program No. to be locked by ▶ / ◀ .
e) Set **Lock** on by ▲ / ▼ and ▶ / ◀ .
f) Set **Child lock** on by ▲ / ▼ and ▶ / ◀ .
g) Set new password by ▲ / ▼ and ▶ / ◀ , if necessary.
h) Press **OK** key to return to upper **Features** menu. The **Child lock** setting is finished. And the lock prompt words display on screen as showed below for lock program. Both the picture and sound of the locked program No. can not be available, until enter correct passport.

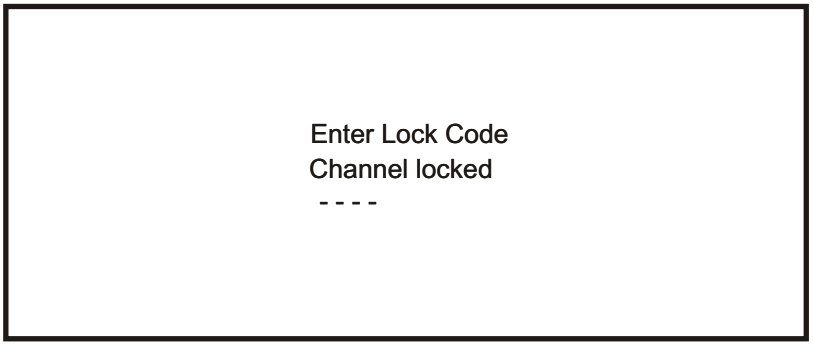

⚠ **Remark: If the correct password is entered, the Child lock function is disabled at once for all lock programs. But lock status for every program will keep previous setting. If you forget your password, you can use code 4711 as the skeleton key.**

Timers submenu

The **Timers** submenu has following items:

a) Clock (Off / 24 hrs / AM/PM)
b) Time (00-23:59/ 00-11:59 AM/PM)
c) Sleep timer (Off / 0-180 minutes)
d) Reminder timer (Off / 0-120 minutes)
e) Timer off (00:00-23:59 / 00:00-11:59)
f) Switch timer (00:00-23:59 / 00:00-11:59)
g) Switch program (1-99)

The **Clock** item can be set to off, or running in 24 hours format, or running in 12 hours with by press ▶ key.

The **Time** item can be set by pressing digital keys directly. Then the time runs automatically. Press **TIME** key on remote control once, the current time will appear on screen.

Sleep timer:

The Sleep timer can be set to off, or some time with maximum 180 minutes in step of 5 minutes by pressing (8 V+,V-,▶ ◀) keys. The TV system will enter into stand by mode when the sleep timer expires.

Reminder timer:

The Reminder timer can be set to off, or some times with maximum 120 minutes in step of 5 minutes by pressing (8 V+,V-,▶ ◀) keys. The TV system will not enter into stand by mode when the Reminder timer expires. Then a yellow warning label " ▽ " will appear on the screen when the Reminder timer expires. The yellow warning label will disappear when press any key once.

Timer off:

The TV System will enter into stand by mode when the off timer expires.

Switch timer:

The TV set will switch from stand by mode to operating status when switch timer expires.

Switch program:

The TV set will switch to preset program No. when the switch timer expires.

Auto Shut Off aTimer

When no Front end identification (from RF) is detected for 5 minutes, the TV system will switch to standby mode automatically.

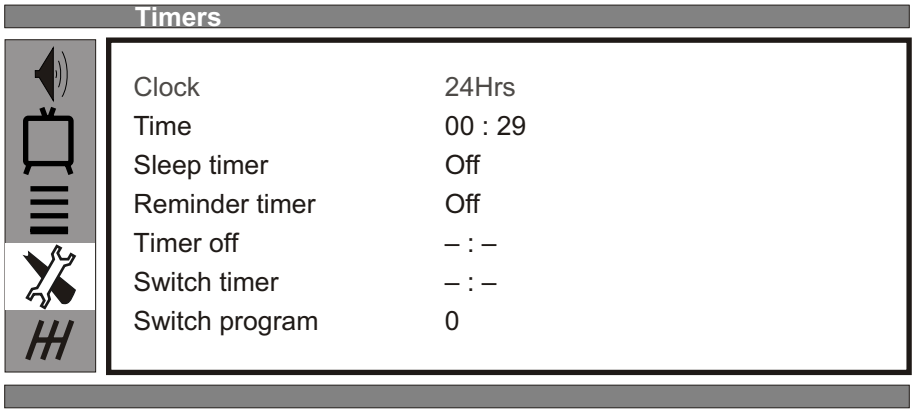

Installation menu function description

The Installation menu has following items :

a) Program nr. (Program number) (1-99)
b) Program name (7 pcs of characters available in maximum)
c) Colour system (Auto / NTSC-443 / NTSC-M / PAL-443 / SECAM / SECAM-L/L')
d) Sound system (BG / I /DK / L/L' / M)
e) Auto tune
f) Frequency
g) AFC (On/Off)

h) Skip (Active) On/Off

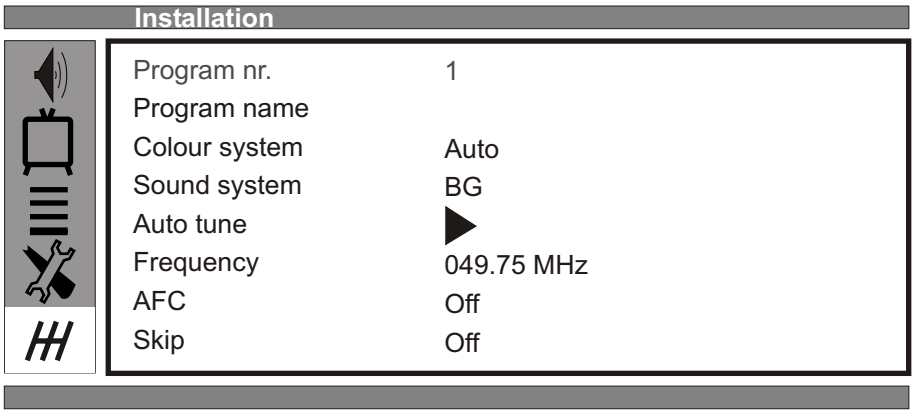

The **Program nr** can be changed by pressing ▶ / ◀ , digital keys, and the picture will be changed accordingly.

The **Program name** can be set as some labels with maximum 7 pcs of characters. The setting steps are listed below.

a) Select **Program name** item by ▲ / ▼ in Installation menu.
b) Select the character position by pressing ▶ / ◀ keys.
c) Press ▲ / ▼ keys to access alphanumeric characters in the sequence A to Z ,+ , -, SPACE and 0 to 9. The Program name hence gets tagged to the particular program. 7 pcs of characters in maximum can be used as one program name.
d) To exit the Program name edit, press ▶ / ◀ several times to the left or right side of the nae

The **Auto tune** is to scan all available TV programs. The operation steps are list ed as below.

a) Select **Auto tune** item by ▲ / ▼ keys in Installation menu.
b) Press ▶ key once to enable **Auto tune** function. A point character "**Sure?**" will appear on the right side of **Auto tune** item.
c) Press ▶ key once again to confirm to run **Auto tune**. A prompt character **"Busy"** will appear on the right side of Auto tune item, and Auto tune will start to scan the available program. It will take a few minutes depending on available program quantity.
d) When **Auto tune** is finished, the **Installation** menu will appear for about 10 seconds, and the picture of program No. 1 will appear on screen.

Note, when **SECAM L/L'** item is set to 1 in service menu, **SECAM L/L'** function is enabled. In this case, the **Auto tune** will scan two rounds. The first round is for negative PIF modulation and sound demodulation is selected as FM. The second round is for positive PIF modulation and sound demodulation is selected as AM.
When **SECAM L/L'** item is set to 0 in service menu, **SECAM L/L'** function is disabled. In this case, the **Auto tune** will scan only one round for negative PIF modulation and sound demodulation is selected as FM.

The **Frequency** item can be used to input program frequency by digital keys on remote control directly. Or just to adjust the tuned program frequency in fine step by pressing ▶ and ◀ keys, to get perfect picture and sound quality.
After frequency input, the program picture will appear on screen, and sound will appear accordingly. The program number can be set as expecting one before program frequency input. All related program information will be save to EEPROM.

The **Colour system** is to select Colour standard as **Auto / NTSC-443 / NTSC-M / PAL-443 / SECAM / SECAM-L/L'.** The Standard selected gets tagged to the particular program.

The **Sound system** is to select RF standard as **BG / I /DK / L/L' / M**. The Standard selected gets tagged to the particular program.

i Remark: For Germany use set the colour system "Auto" and sound standard "BG".

The **AFC** can be set to On or Off for the particular program by pressing ▶/◀ keys.
The **Skip (Active)** is to skip or not the particular program by pressing ▶ / ◀ keys.

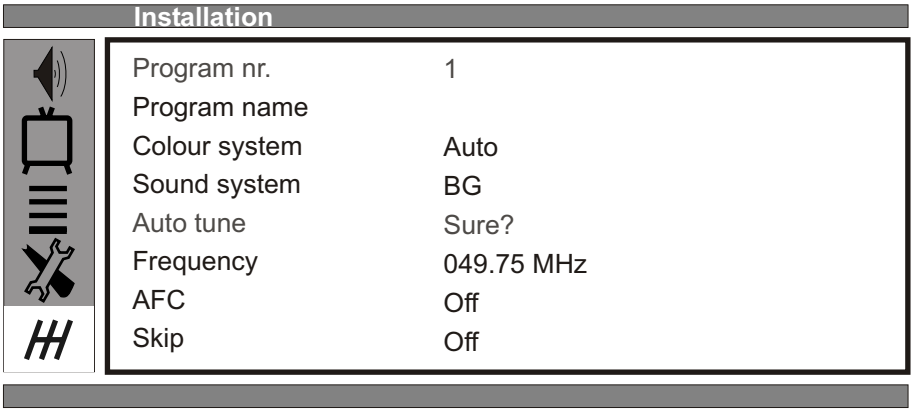

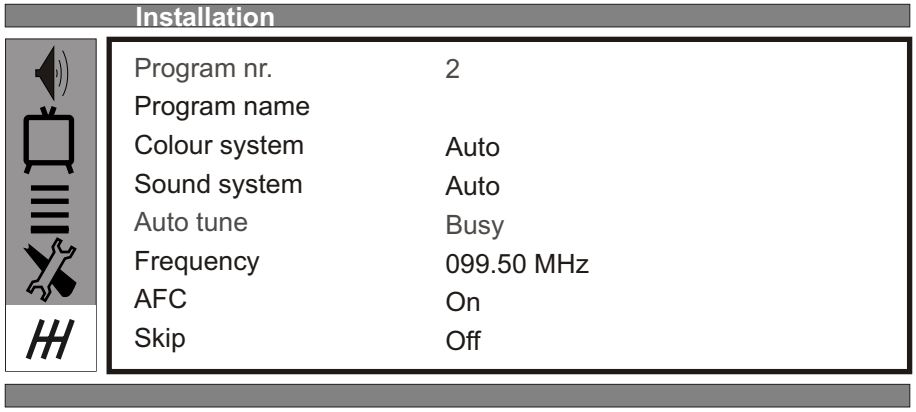

Hotel mode menu function description

Hotel mode function is designed in this TV system for special purpose. The **Hotel mode** can be enabled and set as steps below.

a) Firstly, press **OK** key once to display main menu on screen.
Input password **1229** to enter **Hotel mode** menu as showed below, while main menu appears on screen.

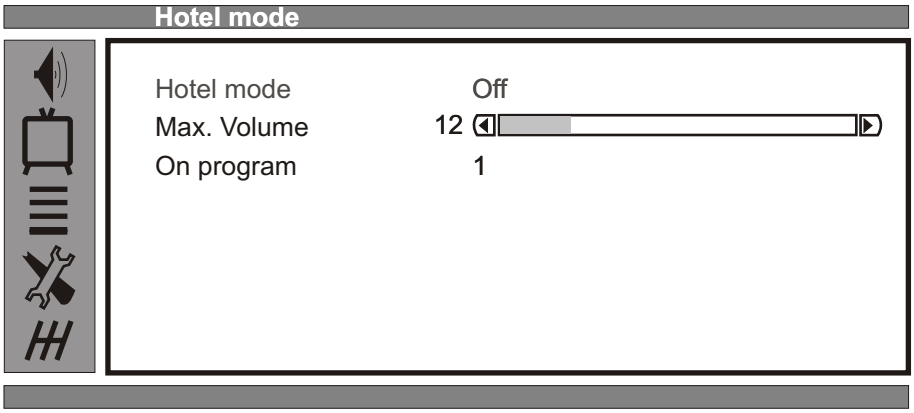

b) There are three items for setting in **Hotel mode** menu.
   1) **Hotel mode (On/Off), it's used to enable or disable Hotel mode function. It can be set by ▶ / ◀ keys.**
   2) **Max. volume (00-63), it's used for maximum volume limitation setting. It can be set by ▶ / ◀.**
   3) **On program (1-99), it's used for power on program number setting. It can be set by ▶ / ◀ and digital keys.**

Press **MENU** key to exit from Hotel mode menu.
When **Hotel mode** is enabled, only **Sound** and **Picture** menus are available. The other menus are not available such as **Overview, Features** and **Installation**.

Automatic scan function description

The Automatic scan function is to have a view of all available programs in short time.
When press P+ / P- key for more than 3 seconds continuously, the Automatic function is enabled.
A logo "→" will display on screen. The next / previous unskipped, unlocked program will be displayed one by one for about one second. During Automatic scanning, the program name is not displayed, and the sound is muted.
The Automatic scan function will be disabled by pressing any key on remote control, and the last program will be displayed on screen.

Television package

TV set -1pc. Operating instruction -1pc.
Remote control -1pc. Packing box -1pc.

Model:	CTV 5506 A ST/VT (B)
Power Supply:	220-240V, 50Hz
Power consumption:	100W
Antenna input:	75 Ohm
Frequency Range:	VHF-L- E2-S6 VHF-H-S7-S41 UHF-E21-E69
Protection class:	II
Net weight:	19,8 kg

Meaning of the “Dustbin” Symbol

Protect our environment: do not dispose of electrical equipment in the domestic waste.

Please return any electrical equipment that you will no longer use to the collection points provided for their disposal.

This helps avoid the potential effects of incorrect disposal on the environment and human health.

This will contribute to the recycling and other forms of reutilisation of electrical and electronic equipment.

Information concerning where the equipment can be disposed of can be obtained from your local authority.

In many EU countries the disposal of electrical and electronic equipment in the domestic waste is prohibited from August 13, 2005 on.
In Germany from March 23, 2006 on.